


# MOP CART INSTALLATION INSTRUCTION

A guide for assembling the Cleanroom Mop Cart with Buckets, Ergonomic Flat Mop Wringer, and Ergonomic Flat Mop.

**Berkshire**  
ENGINEERED CLEAN

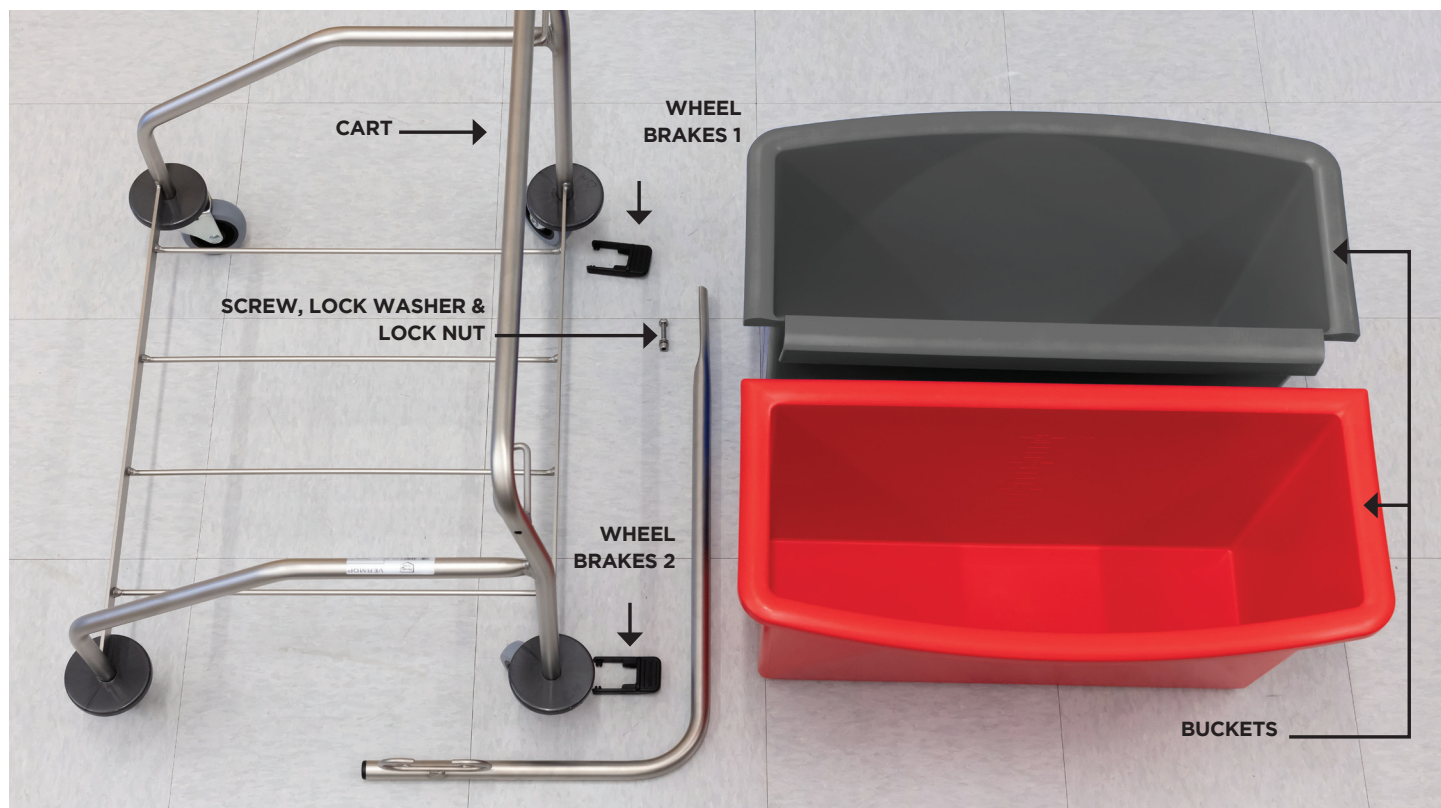

## STEP 1.

Open package and make sure all parts are included: cart, buckets (x2), handle, wheel brakes (x2), screw, lock washer, lock nut.



## STEP 2.

**Install wheel brakes:** depress the wheel brake from the back of the wheel until the brake is engaged. in rectangular holes. Press down on the brake to lock wheels; lift to unlock.






### STEP 3.

**Install handle:** align the handle with screw holes on the side of the cart; ensure the mop handle points to the cart front; insert screw and washer; then tighten the nut.



### STEP 4.

**Install buckets:** the edge of the grey bucket goes on top of the red bucket.

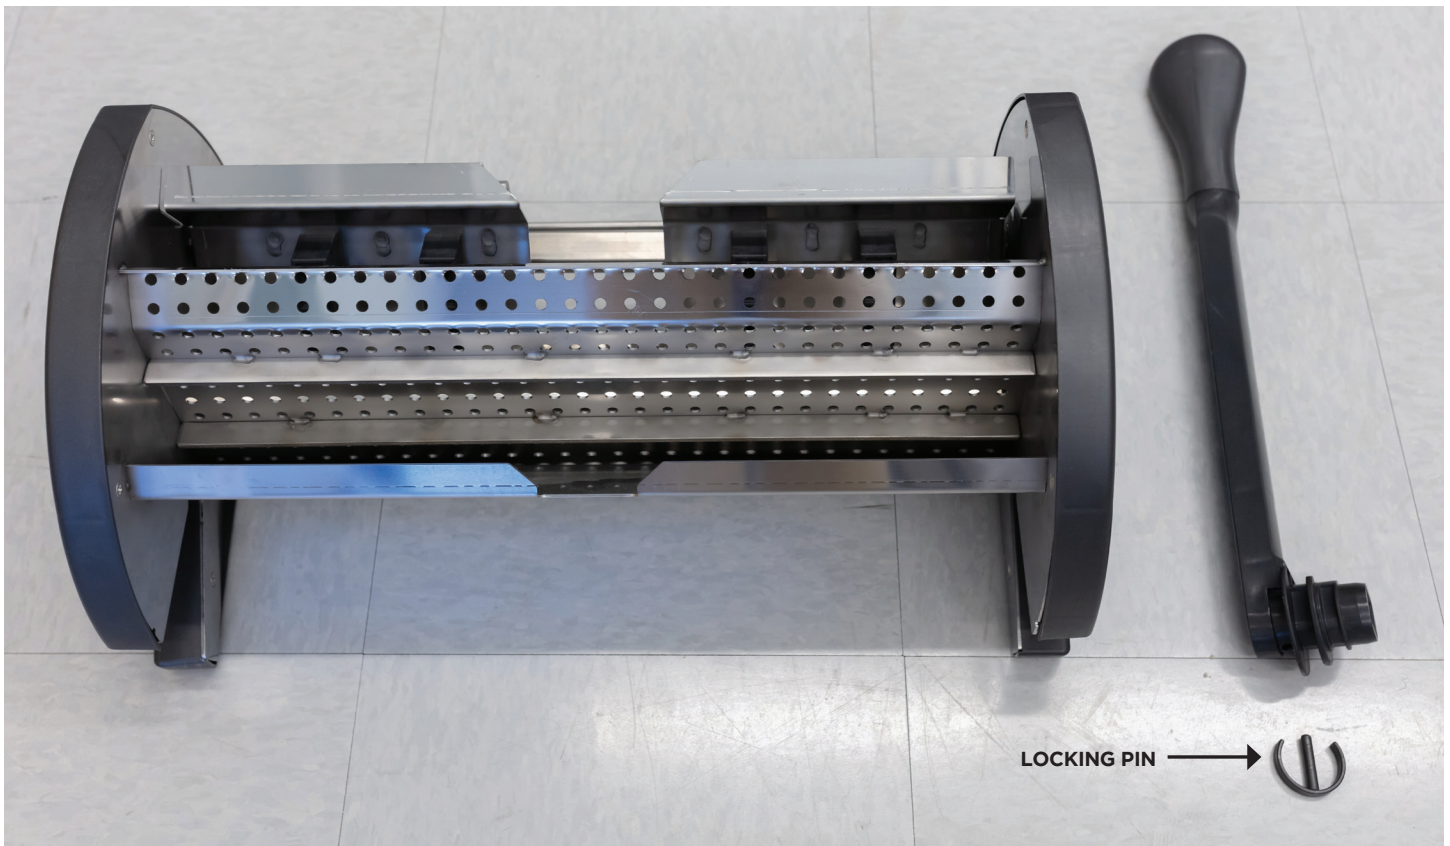

### STEP 5.

**Wringer assembly:** Open the package and find all included parts—wringer, handle, and locking pin.



### STEP 6.

**Insert the handle:** ensure holes on the handle align with holes on the metal bar in the wringer; push the handle completely into the insert.





**STEP 7.**

Insert the lock pin until it is completely flush with the edge of the handle.



**STEP 8.**

Place the wringer on top of the cart.



## STEP 9.

**Flat mop assembly:** align screw holes on mop head and handle; insert screw and tighten the lock nut.



## STEP 10.

**Install holder clips:** insert the holder clip at the position parallel to the mop head; rotate the clip until it is perpendicular to the mop head.



## STEP 11.

**Install mop cover:** press hand switch to fold mop head; slide on mop cover and flatten mop head.



# COMPLETED ASSEMBLY

